

## End distributor socket

Type No. EVDK12-2 to EVDK34-3

P 5-90\_e

Plastic, with quick disconnect couplings DN 7.2, »R26MS« series



2 or 3-way end distributor sockets made of high-strength glass fibre-reinforced plastic (PA6 GF 30) for a wide range of applications. Available with 2 or 3 pre-assembled, brass quick disconnect couplings and 2 inlet thread sizes for input and output threads (Not combinable). All distributor sockets have a durable brass threaded insert, whose shape secures it against rotation and against axial shift due to its shape. Drilling diagram dimensions are identical for all distributor sockets, so a simpler and more flexible exchange replacement.

#### **Caution:**

Note that the distributor sockets should not be installed in danges zones. Danger zones are, for example, transport routes, escape routes, etc.

Operating pressure Max. 15 bar Temperature range -10 °C to 50 °C

Housing Glass fibre-reinforced plastic PA6 GF 30

Port Brass

Max. tightening torque

brass thread 12 Nm

Max. tightening torque

mounting holes 4 Nm



EVDK12-2

End distributor socket without through-hole thread, with standard couplings DN 7.2					
Type No.	Art. No.	Inlet thread	Coupling	Width mm	Height mm
EVDK12-2	107275	G 1/2	2 x brass coupling	120.0	59.0
EVDK12-3	107276	G 1/2	3 x brass coupling	120.0	59.0
EVDK34-2	107277	G 3/4	2 x brass coupling	120.0	59.0
EVDK34-3	107278	G 3/4	3 x brass coupling	120.0	59.0

### End distributor socket

Type No. EVDK12-2 to EVDK34-3



#### Installation location

The installation location of the quick-connect coupling must be selected so that the health of the person operating it cannot be harmed by sources of danger in the immediate surroundings, e.g. from slipping, jamming, contaminating or burning.

#### Low pressure applications

Threads for low-pressure applications are, if seriesrelated no corresponding coatings or sealing rings are present, to be provided with suitable sealing materials, such as a PTFE belt or liquid sealing agent. Here the resistance to the flowing medium must be paid attention to.

#### Service manual

Quick-connect couplings are predominantly maintenance-free, if used in standard applications and handled carefully. The selection of the quick-connect coupling must be compatible with the intended purpose of use and material. Depending on the operating conditions it is recommended to provide the following points during maintenance:

**External visual inspection** with dirt in the functioning area of coupling and plug (seal area, control elements) these must be cleaned. The following distinguishing symptoms require replacement of the corresponding parts: Torn, damaged, heavily damaged or corroded parts, leaks on coupling and / or plug parts.

**Function test** under maximum Max. operating pressure can be used to test the quick-connect coupling for possible malfunctions and leaks. During the testing and operating phase it must be ensured that the operating personnel work protected.


Replacement intervals for quick-connect couplings must, if available, be adapted to the state or technical standards. However, also operating experiential values, which result from the required operational safety and the conditions of use, such as downtimes, coupling frequency, Max. operating pressure and properties of the medium, are critical for establishing the replacement intervals.

### **Pulsating tool**

When using pulsating tools it is recommended to observe the standard ISO 6150, § 7.1. It recommends installing a minimum 300 mm long, flexible hose between the pulsating tool and the quick-connect coupling. The oscillating forces are taken by the hose piece and thus increase the service life of the quick-connect coupling. No warranty can be made for couplings mounted directly on pulsating tools.

#### Flow direction

The recommended flow direction is from the coupling to the plug if nothing else is specified in the technical data sheet.

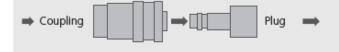

## Application with hoses

When using hoses the permissible Max. operating pressure and the working temperature must absolutely be observed and suitable hose connections must be seen to.



# End distributor socket

Type No. EVDK12-2 to EVDK34-3

P 5-90\_e

# **Drilling Template for cutting out:**



